

# **Monitoring System**

**Customer Manual** 

Version 1.2, 2018-03-23



## Access control

In order to change a device's settings, you must be connected to it. Select the device you wish to change from the list and click on *Connect*.

Tree view List view	Info Access Log Map Settings	Status Advanced
My units - Customer 1 Device 1	Name Device 1   Address Energigatan 10 B   Zip code 434 37   City Kungsbacka   Country Sweden   Comments Comments   Apr: m2m tele2.com   Phone number +37283237652   Product SMS-transceiver W4   Firmware 1.0.0.1486	Circuit Breaker OK Out 1 Power OK Signal level Updated: 9/21/17 Time: 7:34:05 AM GMT Disconnected
	Edit Info Share device	Connect

When the device is online, there will be a black dot in the *Device* icon and the word *Connected* will appear in the *Status* box.

Tree view List view	Info Access Log Map Settings	Status Advanced
My units - Customer 1 - Divice 1	Name Device 1   Address Energigatan 10 B   Zip code 434 37   City Kungsbacka   Country Sweden   Comments Apn:   Phone number +37283237652   Product SMS-transceiver W4   Firmware 1.0.0.1486	Circuit Breaker OK Out 1 Off Out 2 Off Power OK Signal level 25 (31) Updated: 9/21/17 Time: 8:28:38 AM GMT Connected
	Edit Info Share device	Command
		Save and send configuration
		Update status
		Out 1 Out 2
		Service done!
		Disconnect



The settings for the device's access control can be found under the *Access* tab. Control is activated by default. If you wish to deactivate it, simply click on the box to uncheck it. This means that absolutely anyone will be able to call the device to activate a relay output or send a status request by text message.

Info	Acces	s Log	Мар	Settings						
Acce	ess list	Call log								
	Cess Control									

You can add up to 1024 names and telephone numbers to the access list. To add a new record, complete the fields under *New access record* and then click on *Add to list*. Remember that you must always include the country code (+46) for all telephone numbers.

Click on the *SMS* (text message) check box if you want that person to be able to manage and query the device via text message.

This box must be checked in order for the device to respond to texts from that number.

The Annual timer bar can be expanded to show the contents of each schedule.

The schedule you choose determines when you will have access to and can manage the functions. Find out more about the *Annual timer* function and how to change the settings under the heading <u>Annual timer</u>. Here you can only view the *Annual timer* settings, not change them.

Info	Access	Log	Мар	Settings						
Acce	ss list	Call log								
Acc	ess Contr	ol								
Yearly	y Time Sw	vitch							. (•	)
Access Entries	<b>i list</b> : 0 (max 1	024)								-
New	access er	ntry								
Name			Number		Program	SMS	Notes			
John	Doe		+3712	3456789	1 ~		Custon	ner 1		
Add	to list	Reset								
Name		Number		Program	~	SM	S	Notes		
No acc	ess entrie	s								



When new access records have been added to the list, you <u>must</u> click on *Save and send configuration* to send the new settings to the device. Make a habit of clicking on *Save and send configuration* every now and then, as the device automatically disconnects after a period of inactivity.

nfo Acce	ss Log	Map S	Settings				Status	Advanced
Access list	Call log					8	Circuit Breat	ker OK
-							Out 1	Off
Access Co	ntrol						Out 2	Off
Yearly Time	Switch					+	Power	ОК
							Signal level	25 (31)
ccess list							Updated:	9/21/17
ntries: 1 (max	(1024)						Time:	8:28:38 AM GMT
							Time.	0.20.00 AM OMT
New access	entry						Connected	
lame		Number	Prog	gram SMS No	tes			
		Required f	field* 1	/			Command	1
		Access	entry added to th	e list				
Add to list	Reset						Save and	send configuration
		On't fo	rget to click on "S	Save and send	d configuration"!	<b>`</b>		
							U	pdate status
lame	Number		Program	SMS	Notes			
				v v			Out 1	l Out 2
		6700	1		Customer 1	1		
ohn Doe	+3712345	0109		L				ervice done!

You can click on the headings to sort the records by column. You can also enter seachwords for each column, which makes it easier to find a specific user.

To edit a record, click on the pen to the far right. This will open a pop-up window in which you can make changes.

Name	Number	Program	SMS	Notes	
			<ul><li>✓</li></ul>		
John Doe	+37123456789	1		Customer 1	

Once you have updated the access record, click on *Update*. Don't forget to click *on Save and send configuration* to send the changes to the device.

Editera access-pos	t		
Name	Number	Program SMS Notes	
John Doe	+37123456789	1 V Customer 1	
Update	Cancel	Delete from list	>
<b>`</b>			



## **Call logging**

All incoming calls are logged and listed in the Monitoring System. You can sort these by clicking on the column headings. The most recent 50 events are listed. Click on *Show full history* to see all stored data. Once this is checked, you also have the option of using the search box for specific users, numbers, etc. You can also export the log data as CSV or XLS files. If someone who is not on the access list has called the device, their caller ID will be displayed instead of a name.

*Update* collects updated information from the device (if it is <u>online</u>). *Delete* clears the log, once it has exported and stored a list (in case you need it at a later date).

Info	Access	Log	Мар	Settings		
Aco	cess list	Call log				
De	elete	Refresh	CSV	'Export	XLS Export	
1 rec	ords	Sho	w full his	tory		
#	Date	Tin	ne	Name / N	umber	Notes
1	2017-09-21	10:4	40:06	John Doe		Customer 1

### Annual timer

Under the *Annual timer* tab you can define up to five different timing schedules. Each schedule has one or more 'track', which you can use to customise the schedule. Each track begins and ends at midnight, so if you want to set up a schedule that begins before and ends after midnight, you have to use two tracks, with one ending at 12.00 midnight and the other starting at 00.00 the next morning. Each day begins at 00.00 am and ends at 12.00 midnight (24.00).

#### The schedule can be used for 3 different functions:

For restricting incoming calls and text messages controlling the outputs.

For preventing the device from sending text messages.

For automatic control of the relay outputs according to a particular schedule.



Inputs	Outputs	Counter	Headin	gs	Year	ly Ti	me	Swit	tch			
cheme fo	or Yearly Time	Switch										
Program	Title		Start	Stop	М	Tu	W	Th	F	Sa	Su	Н
1	Always		00:00	24:00	$\checkmark$	~						
2	Office hours	;	08:00	17:00	~	$\checkmark$	$\checkmark$	~	$\checkmark$			
3	Off hours		17:00	24:00	~	$\checkmark$	4	1	4			
			24:00	08:00	~	~	$\checkmark$	~	~			
			00:00	24:00						$\checkmark$	$\checkmark$	$\checkmark$
4			08:00	17:00	~	$\checkmark$	4	~				
			08:00	13:00					$\checkmark$			
			10:00	14:00						$\checkmark$	$\checkmark$	
			10:00	12:00								$\checkmark$
			00:00	24:00								
5			00:00	24:00								
			00:00	24:00								
			00:00	24:00								
			00:00	24:00								
			00:00	24:00								

To configure public, national, religious and bank holidays, expand the *Bank holidays* title bar by clicking on the + sign. We have already added a list of Swedish bank holidays, so all you have to do is add or remove holidays from the list. <u>Note! The device must be online in order to edit the holidays list</u>.

Holidays			-
New holid	ay		
Date	Title		
		Add	
Date	Title		Delete
1/1/17	Nyårsdagen (söndag)		×
1/6/17	Trettondedag jul (fredag)		×
4/14/17	Långfredagen (fredag)		×
4/15/17	Påskafton (lördag)		×
4/16/17	Påskdagen (söndag)		×
4/17/17	Annandag påsk (måndag)		×